INSTALLATION INSTRUCTIONS FOR 5743-206

For Wall Mount Fixture

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER

MOUNTING THE FIXTURE 3x100w (A) 23 1/4"W x 10"H Ext 8 1/2"

Installation (see fig.1)

1. Disconnect power at main electrical panel before installation.
2. Mount the back plate to the wall with the plastic anchors, the wood screw (H) and the two box screw (G). The side of the back plate marked "GND" must face out.
3. Pull fixture wires through hole in center of back plate.
4. Follow wiring instructions carefully (see fig.2)
5. Place the fixture body (E) over the back plate and lock it securely with the screw (F) using the tool (I).
6. Attach the accent cup (D), glass shade (C) and collar ring (B) on lamp holder, then lock it securely with check ring (A).
7. Install the light bulbs in accordance with the fixture's specifications. DO NOT EXCEED THE MAXIMUM WATTAGE RATING!

Wiring (see fig.2) without Accent cups

1. Connect the electrical wires as follows. Connect the Black wire from the fixture to the black house (hot) Wire. Connect the white wire from the fixture to the white (neutral) house wire. Make sure all wire nuts are secured. You may wrap the connections with electrical tape. If your outler box has a ground wire (green or bare copper) connect fixture's ground wire to it. Otherwise attach the bare copper fixture wire to the green ground screw on the circular strap.
2. Tuck the wire connections neatly into the wall junction box.

10 1/2"H with Accent cups.

Fig.1

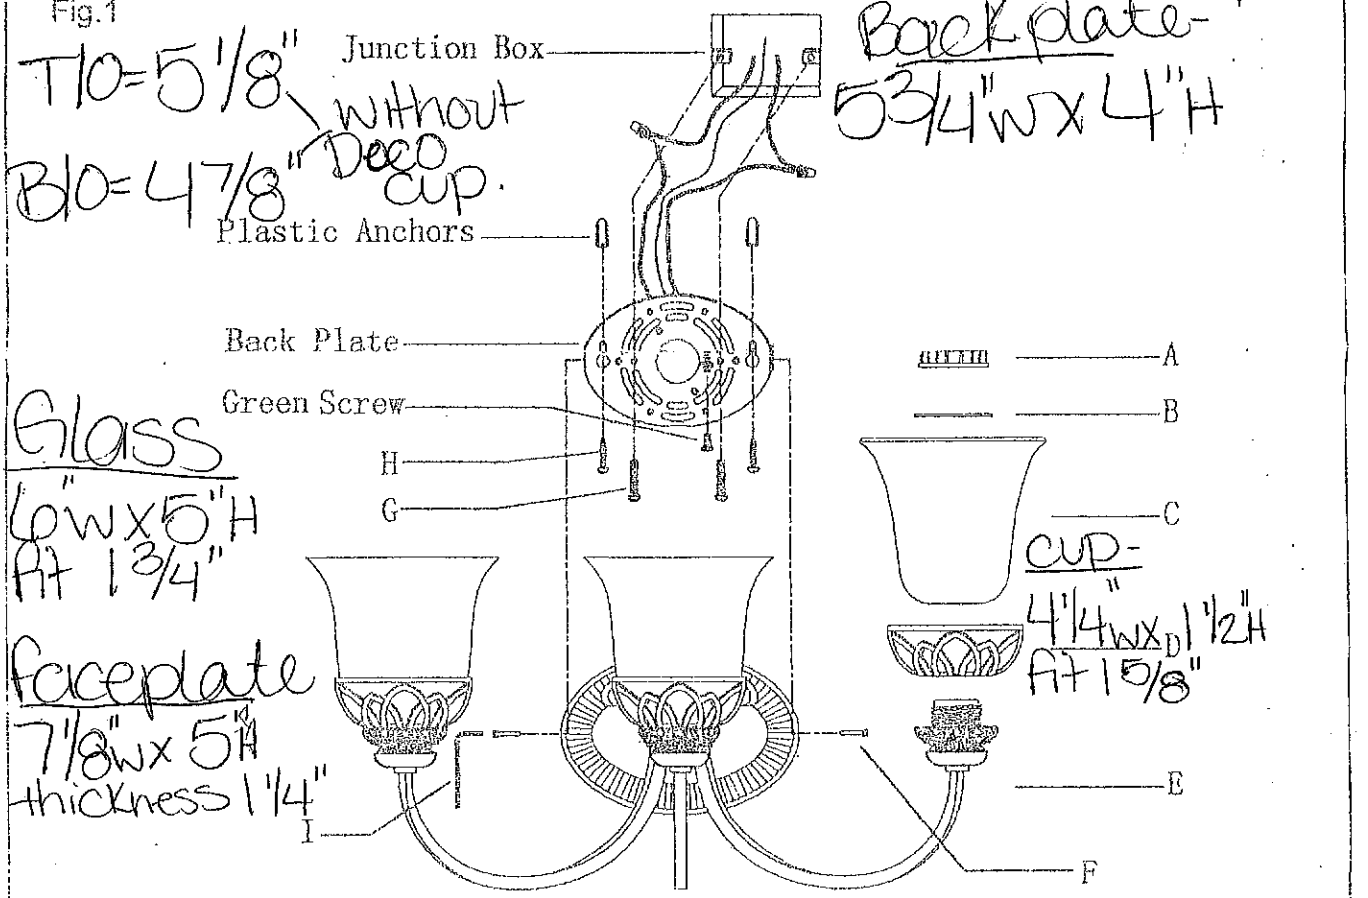

Back plate- 5 3/4"W x 4"H

Glass 6"W x 5"H fit 1 3/4"

faceplate 7 1/8"W x 5"H thickness 1 1/4"

CUP- 4 1/4"W x D 1 1/2"H fit 1 5/8"

Box Meas- 22.25" x 12.5" x 11.5"

NW- 3.30 Kgs

G.W- 4.48 Kgs

Fig.2

FIXTURE WIRES Black or Smooth	HOUSE WIRES Black (Hot)	FIXTURE WIRES White or Ribbed	HOUSE WIRES White (Neutral)	FIXTURE WIRES Bare Copper (Ground)	HOUSE WIRES Green or Bare Copper (Ground)

LISTED